

▼ Shown: HF-95T, HF-95X, HF-95Y



The Genuine Range

Hydraulic Oil






Contents	Model Number	Use only genuine Enerpac Hydraulic Oil. The use of any other fluid will render your Enerpac warranty null and void.
1 litre	HF-95X	
5 litres	HF-95Y	
20 litres	HF-95T	

▼ OIL SPECIFICATION CHART

Viscosity Index	100 min
Viscosity (cSt @ 40 °C)	32
API Gravity	31-33
Density (cSt @ 15 °C)	875
Flash point	204 °C
Pour point	32 °C
Colour	Blue
Working Temperature Range	0 - 60 °C
Ideal working temperature	40 °C

- Maximum pump volumetric efficiency
- Maximum internal heat transfer
- Prevents pump cavitation
- Additives prevent rust, oxidation and sludge
- High viscosity index
- Maximum film protective lubricity.

Manifolds

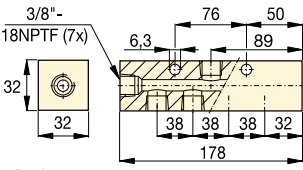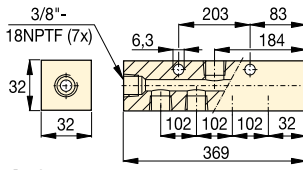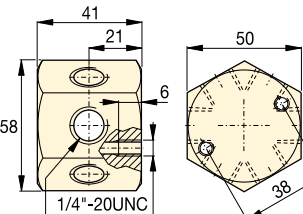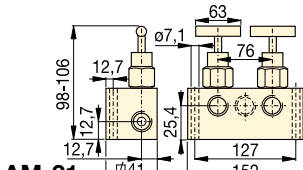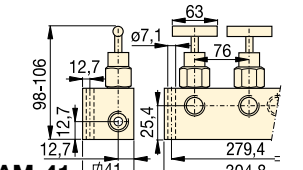
Description		Model Number	Dimensions (mm)
7-port Manifold, short		A-64	  A-64 A-65
7-port Manifold, long allows direct mounting of control valves to the manifold.		A-65	
6-port Manifold, hexagon Plugs furnished for all ports 3/8"-18 NPTF.		A-66	
Control Manifolds For control of two or four single-acting cylinders simultaneously. AM-21 with 5 ports 3/8"NPTF. AM-41 with 7 ports 3/8"NPTF.		AM-21	  AM-21 AM-41
		AM-41	

Hydraulic Oil, Manifolds and Fittings




















3/8" Swivel Connector

360 degree swivel coupler for optimal orientation of the hydraulic connection on cylinders, pumps and hoses. Order Model Nr. **XSC-1**.

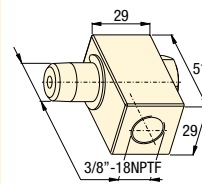

**A, AM
BFZ
FZ
HF
Series**



700 bar Fittings			Model Number	Dimensions (mm)		Series			
				A	B	C	D		
Street Elbow				FZ-1616	23	33	3/8"-18 NPTF	3/8"-18 NPTF	
From: 3/8"-NPTF Male									
To: 3/8"-NPTF Female									
Reducing Connector				FZ-1615	28	25	3/8"-18 NPTF	1/4"-18 NPTF	
From: 3/8"-NPTF Female									
To: 1/4"-NPTF Female									
From: 1/2"-NPTF Female				FZ-1625	47	29	1/2"-14 NPTF	3/8"-18 NPTF	
To: 3/8"-NPTF Female									
Hexagon Nipple				FZ-1608	38	16	1/4"-18 NPTF	1/4"-18 NPTF	
From:		To:							
1/4"-NPTF		1/4"-NPTF							
3/8"-NPTF		3/8"-NPTF							
3/8"-NPTF		3/8"-NPTF							
Coupling				FZ-1614	29	23	3/8"-18 NPTF	3/8"-18 NPTF	
From:		To:							
3/8"-NPTF		3/8"-NPTF							
1/4"-NPTF				FZ-1605	29	19	1/4"-18 NPTF	1/4"-18 NPTF	
1/4"-NPTF		1/4"-NPTF							
Cross				FZ-1613	45	25	3/8"-18 NPTF	-	
From: 3/8"-NPTF Female									
To: 3/8"-NPTF Female				FZ-1612	45	25	3/8"-18 NPTF	-	
Tee									
From:		To:							
3/8"-NPTF		3/8"-NPTF							
1/4"-NPTF		1/4"-NPTF							
Street Tee				BFZ-16312	56	26	3/8"-18 NPTF	3/8"-18 NPTF	
From: 3/8"-NPTF Female									
To: 3/8"-NPTF Male				FZ-1610	33	20	3/8"-18 NPTF	-	
Elbow									
From:		To:							
3/8"-NPTF		3/8"-NPTF							
1/4"-NPTF		1/4"-NPTF		FZ-1638	36	24	1/4"-18 NPTF	-	
1/4"-NPTF		1/4"-NPTF							
Reducer				FZ-1630	19	19	1/4"-18 NPTF	3/8"-18 NPTF	
From:		To:							
3/8"-NPTF		1/4"-NPTF							
1/4"-NPTF		1/2"-NPTF							
3/8"-NPTF				BFZ-1630	28	22	1/4"-18 NPTF	1/2"-14 NPTF	
G1/4"									
Adaptor									
From:		To:		BFZ-16411	35	19	1/4"-18 NPTF	G1/4"	
G1/4"		1/4"-NPTF							
G1/4"		1/8"-NPTF							
G3/8"		1/4"-NPTF							
G3/8"		3/8"-NPTF							
Adaptor				BFZ-16421	31	19	1/8"-27 NPTF	G1/4"	
From:		To:							
1/4"-NPTF		3/8"-NPTF							
1/4"-NPTF		1/8"-NPTF							
1/2"-NPTF				FZ-1055	44	23	1/4"-18 NPTF	3/8"-18 NPTF	
1/4"-NPTF		1/8"-NPTF							
1/2"-NPTF		3/8"-NPTF							
Swivel Fitting				FZ-1660	40	22	3/8"-18 NPTF	3/8"-18 NPTF	
From: 3/8"-NPTF Male									
To: 3/8"-NPTF Female									